



Cut here to remove. Do Not Tear!

EMERALD MOUNTAIN SL1, SL2 AND SL3 SET UP INSTRUCTIONS

1. Remove tent parts from stuff sack and lay tent body flat on ground.
2. Assemble the two poles; one hubbed pole with 2 hubs and a straight pole with one blunt end and one end to fit in a grommet.
3. Insert the tips of the hubbed pole into the grommets on the corners of the tent. **EM1 / EM2:** the shorter pole sections from the hub correspond to the green webbing at the foot of the tent. **EM3:** the hubbed pole has equal length pole sections so the pole tips may be inserted in either direction.
4. Attach plastic clips on the tent body to the hubbed pole you have just setup.
5. Locate the webbing strap with a grommet and buckle that is attached to the floor seam at the middle of what will be the back door and smaller vestibule. **EM1:** the 1 person model has only one door, so the webbing strap will be located at the back of the tent, opposite the single door.
6. Insert the tip of the straight pole into the grommet you have just located in Step 5. This pole will cross over the middle of the tent body, with the blunt end fitting into the fly (Step 11).
7. Attach the metal hook above the back door of the tent body to the metal loop on the cross pole.
8. Locate the webbing pocket at the top of the front door and insert the blunt end of the cross pole.
9. Drape the fly over the tent so that the vestibule door with the zipper down the middle is aligned with the back door of the tent (the door where the cross pole reaches the ground), matching green webbing on fly and body together and black webbing on fly and body together. **EM1:** 1 person model does not have a back door.
10. Clip the 3 buckles on back side of the fly and body together first.
11. Find the webbing pocket on the underside of the fly just above the front door.
12. Insert the end of the pole from step 8 (in webbing pocket on body) into the webbing pocket in the fly.
13. Clip the front corner buckles of the fly and body together. Cinch the tightening straps on all corners of the fly taut.
14. Stake out the corners, two doors, and all guy lines for maximum stability, space, and ventilation.

Separate 6", large diameter pole segment included for emergency field repair.
Slide repair pole over the break to act as a splint.

OPTIONAL ACCESSORY VESTIBULE SETUP INSTRUCTIONS:

1. Remove contents from stuff sack and assemble pole.
2. Unzip and remove the standard front vestibule door from the tent.
3. Zip the accessory vestibule to the fly – the zippers will start at the bottom front corners and zip closed to the top of the front vestibule door.
4. Feed the pole through the sleeve in the underside of the accessory vestibule.
5. Insert the pole tips into the grommets on the webbing strap running across the floor of the vestibule.
6. Pull the accessory vestibule taut and stake out the three webbing loops on the end of the vestibule.



SL2 with Accessory Vestibule

FAST FLY SET UP INSTRUCTIONS

If you purchase the optional Big Agnes footprint for any of our models, it will enable you to pitch a Fast Fly shelter while leaving the tent body behind. The Fast Fly configuration requires the footprint, tent fly, poles and stakes. The Accessory Vestibule can also be used in the Fast Fly set up.

1. Lay the foot print on the ground and stake out.
2. Assemble hubbed pole and insert pole tips into grommets on foot print. **EM1 / EM2:** the shorter pole sections from the hub correspond to the green webbing at the foot (narrower end) of the tent. **EM3:** the hubbed pole has equal length pole sections so the pole tips may be inserted in either direction.
3. Assemble single cross pole that will go over the middle of the hub/pole. Insert the pole tip that fits into a grommet into the webbing at the back side of the footprint. In step 5, the blunt end of the cross pole will fit into the webbing pocket on the underside of the fly, above the front door.
4. Drape the fly over the pole frame so that the back vestibule door with the zipper down the middle is aligned with the back of the footprint, where the cross pole reaches the ground, matching green webbing on fly and footprint together. **EM1:** 1 person model does not have a back door.
5. Insert blunt end of cross pole into webbing pocket on underside of fly, above the front door.
6. Clip buckles of fly and footprint together and cinch tightening straps at corners.
7. The cross pole will align across the hubbed pole frame when you insert the blunt end into the webbing on the fly and clip all the buckles of the fly to the footprint. When the fly is staked out tightly, the cross pole will be stabilized under the fly.
8. Stake out all corners and guy lines for maximum stability and space.

----- Cut here to remove. Do Not Tear! -----



Emerald Mountain SL1

Emerald Mountain SL2

Emerald Mountain SL3

Thanks for choosing a Big Agnes tent!

Please feel free to contact us if you have any questions or comments.

info@bigagnes.com or call toll free 877-554-8975

TENT CARE

Storage

Always make sure your tent is dry and free of debris before storing. Stuff or fold your tent a different way each time to avoid permanent creases. Store in a cool, dry place. Never leave your tent in very hot temperatures (such as a car trunk), as it will damage the material coatings. Storing your tent damp can result in mildew growth, which may cause your tent to smell, leak or delaminate. Mildew damage is not covered under warranty.

Cleaning

For light cleaning, you can sponge the tent with warm water. If it's necessary to wash the entire tent, always use cleaners recommended specifically for tents. We recommend McNett Mirazyme cleaner, or Nikwax Tech Wash. Do not dry clean or machine-wash your tent. Detergents and dry cleaning solvents will damage the fabric and ruin waterproofing. Never use hot water, bleach, liquid detergents or dishwashing liquids.

Seam Sealing

Seam tape alone is durable enough to prevent water leakage. Any seams that have been taped do not need to be seam sealed with a liquid sealer unless you want extra protection. Make sure the seam-sealer is completely dry before re-packing your tent. Damage caused by misapplication may void warranty.

Zippers

Keeping your zippers clean will help keep the coils and sliders from wearing out. If filled with dirt, vacuum or brush zippers before storing tent.

Repairs and Warranty

All Big Agnes tents are guaranteed against manufacturing or material defect. We do not warranty products damaged from normal wear and tear, alteration made by owner, misuse, accidents or damages caused by uses other than intended. Damage due to misuse, normal wear and tear, or improper care may be repaired at a reasonable charge. Tents returned for repair must be clean and free of debris.



P.O. Box 773072 • Steamboat Springs, Colorado • 80477

Toll Free: 877.554.8975 • info@bigagnes.com • www.bigagnes.com