



----- Cut here to remove. Do Not Tear! -----

PINE ISLAND 4 SETUP INSTRUCTIONS

1. Remove all contents from briefcase-style carry bag and lay tent body out on ground.
2. Assemble all three poles, a hub/pole with 2 hubs, and two straight poles; one silver, one gold.
3. Take the hub/pole and insert the tips of the gold pole sections into the grommets on the yellow webbing straps at the front corners of the tent.
4. Insert the two remaining pole tips into the grommets in the black webbing at the back corners of the tent. The hub/pole will now be standing up.
5. Attach the plastic clips on the tent body to the pole frame.
6. Locate the black webbing straps with grommets along the floor seam at the side of the tent body and insert the tips of the silver pole into these two grommets.
7. Attach the corresponding plastic clips on the tent body to the silver pole.
8. Drape the fly over the tent body so that the yellow webbing straps on the fly align with the yellow webbing straps at the front corners of the tent body.
9. Clip the four black buckles of the fly and tent body together.
10. To set up the large, front vestibule: Insert the gold pole through the sleeve located at the front vestibule on the underside of the fly.
11. Insert the pole tips into the two remaining grommets in the yellow webbing at the front corners of the tent body.
12. Clip the yellow buckles of the fly and tent body together.
13. Stake out corners and all guy lines for optimum stability, space, and ventilation.

**Separate 6", large diameter pole segment included for emergency field repair.
Slide repair pole over the break to act as a splint.**

FAST FLY SET UP INSTRUCTIONS

If you purchase the optional Big Agnes footprint for our Pine Island tent, it will enable you to pitch a shelter while leaving the tent body behind. The Fast Fly configuration requires the footprint, tent fly, poles and stakes.

1. Lay the footprint on the ground and stake out.
2. Assemble the hub/pole frame and insert the four pole tips into the inner grommets on the footprint, matching the gold poles with the yellow webbing straps at the front corners of the tent.
3. Run the silver pole over the hub/pole frame and insert the tips into the grommets on the side of the footprint.
4. Drape the tent fly over the poles, matching the yellow webbing on the fly to the yellow webbing on the footprint.
5. Clip the black buckles of the fly and footprint together at the rear and side of the tent.
6. Align the silver pole across the middle of the hub/pole frame when you clip all the buckles of the fly to the footprint. When the fly is staked out tightly, the cross pole will be stabilized under the fly.
7. Feed the gold pole through the sleeve at the top of the front vestibule on the underside of the fly and insert the pole tips into the remaining grommets on the yellow webbing at the corners of the footprint.
8. Clip the yellow buckles of the fly and footprint together.
9. Stake out all corners and guy lines for optimum stability, space and ventilation.

HELPFUL HINTS FOR TENT SET UP

- Our tents are easy to set up but we suggest you practice once at home before using them for the first time to avoid late night bickering with tent mates while fumbling around in the dark.
- Before pitching tent, clear campsite of debris that may pierce tent floor.
- Big Agnes tents are all freestanding, but we recommend staking them out to increase space and keep your tent from becoming a tumbleweed.
- Hang onto your stuff sacks or they'll blow away and create backcountry litter.
- Pull on the pole sleeve fabric when inserting poles to avoid any bunching in the material.
- Push rather than pull poles through pole sleeves.



Cut here to remove. Do Not Tear!



Thanks for choosing a Big Agnes tent!

Please feel free to contact us if you have any questions or comments.

info@bigagnes.com or call toll free 877-554-8975

TENT CARE

Storage

Always make sure your tent is dry and free of debris before storing. Stuff or fold your tent a different way each time to avoid permanent creases. Store in a cool, dry place. Never leave your tent in very hot temperatures (such as a car trunk), as it will damage the material coatings. Storing your tent damp can result in mildew growth, which may cause your tent to smell, leak or delaminate. Mildew damage is not covered under warranty.

Cleaning

For light cleaning, you can sponge the tent with warm water. If it's necessary to wash the entire tent, always use cleaners recommended specifically for tents. We recommend McNett Mirazyme cleaner, or Nikwax Tech Wash. Do not dry clean or machine-wash your tent. Detergents and dry cleaning solvents will damage the fabric and ruin waterproofing. Never use hot water, bleach, liquid detergents or dishwashing liquids.

Seam Sealing

Seam tape alone is durable enough to prevent water leakage. Any seams that have been taped do not need to be seam sealed with a liquid sealer unless you want extra protection. Make sure the seam-sealer is completely dry before re-packing your tent. Damage caused by misapplication may void warranty.

Zippers

Keeping your zippers clean will help keep the coils and sliders from wearing out. If filled with dirt, vacuum or brush zippers before storing tent.

Repairs and Warranty

All Big Agnes tents are guaranteed against manufacturing or material defect. We do not warranty products damaged from normal wear and tear, alteration made by owner, misuse, accidents or damages caused by uses other than intended. Damage due to misuse, normal wear and tear, or improper care may be repaired at a reasonable charge. Tents returned for repair must be clean and free of debris.



P.O. Box 773072 • Steamboat Springs, Colorado • 80477
Toll Free: 877.554.8975 • info@bigagnes • www.bigagnes.com