

Eureka!

FOR LIFE OUTDOORS.

ASSEMBLY INSTRUCTIONS for the Autumn Wind 2XD and 3XD:

Component List:

1 Tent Body, 1 Fly, 2 Long Poles, 1 Hoop, 1 Carry Bag, 1 Pole Bag, 1 Stake Bag and Stakes

Do not drop tent bag or pole bag on its end. Do not bounce tent bag on its end to get the tent out. These actions may cut the shock cord and/or damage the pole ends.

- Unroll and unfold the tent on the ground, unzip the door and set the fly aside. Do not stake the tent down. In windy conditions however, stake the front corner into the wind.
- Assemble all the poles to their full length. Lay the poles side by side and divide according to length. Lay the two long poles across the tent body. They should run corner to corner crossing in the center. Set the hoop aside. Try to keep the poles from snapping together, as this can damage the ends. See fig.1.

NOTE: Make sure each pole section has firmly seated into the adjacent section.



fig.1

- Insert a post into one of the a grommets on the tent web foot at B and at the opposite corner D. See fig.1 & 2. Note: all webs on the 2XD have one grommet per web.

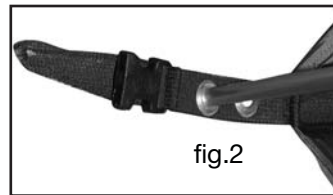


fig.2

- On the tent web foot at A, grasp the web and push the pole to form an arc. Insert the locking post into the grommet to maintain tension. Repeat with the other pole from C to D. See fig.3.



fig.3

- Start at B & D. Raise the tent poles and attach the clips from the tent body to the frame as you work your way toward A & C. See fig. 4 & 5.

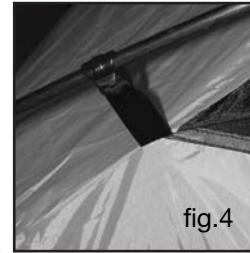


fig.4



fig.5

- With both long poles secure in their grommets and clipped to the tent, fit the hoop between the two poles behind the tent clip. At E, insert the post into a grommet. Then, at F, arch the pole and insert the locking post into a grommet. Clip the remaining tent clips to this pole. The tent is now free-standing. See fig.6.



fig.6

- Place it in the desired location. Stake the tent down through the corner webs. Stake the opposite corners while applying tension to square the tent and smooth the floor wrinkles. Next stake out the two side webs.

NOTE: General purpose stakes are included but snow or sand stakes can be purchased at a Eureka! dealer. See fig. 7.



fig.7

- The fly only fits one way, drape it over the tent with the Eureka! logo above the front door.
- Reach under the fly and wrap the hook and loop straps around the poles to secure the fly to the tent frame. Connect the side-release buckles from the fly to their mates on the tent. See fig. 8, 9 & 10.

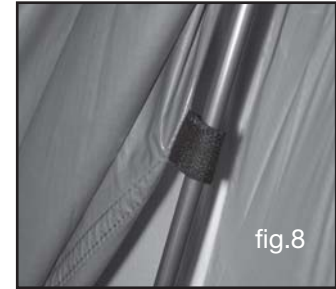


fig.8

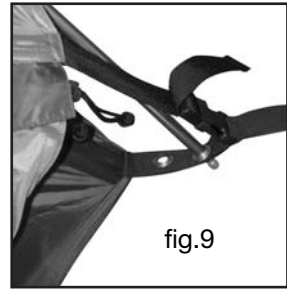


fig.9

- At the front of the tent stake out the two web loops on the vestibule. At the side of the fly, stake down the shock cord pull outs. On the 3XD only, stake out the shock cord pull out at the rear of the fly.



fig.10

- With all web loops staked down, adjust the side-release buckles for proper tension.
- There are extra cords pre-attached to the storm loops on the fly and extra stakes in the stake bag. In strong winds, stake out so that these cords are tight.
- Take down: Pull up stakes and open doors. Remove the fly. Un-clip tent from the poles. Pull poles out of the webs, collapse the poles and stow in the pole bag. Fold the tent/fly. Roll up both along with the pole bag towards the door and stow all in the carry bag.