

2 TENT POLES
1 FLY ROD
1 STAKE BAG
6 STAKES

1 CARRY BAG
1 TENT
1 FLY

1 Unroll the tent and remove the fly. Open the door of the tent. Do not stake the tent down yet. *In windy conditions, stake down the corner that faces into the wind.*

2 Assemble all the poles. Make sure each rod is fully inserted into the next rod. Do not let the rods snap together.

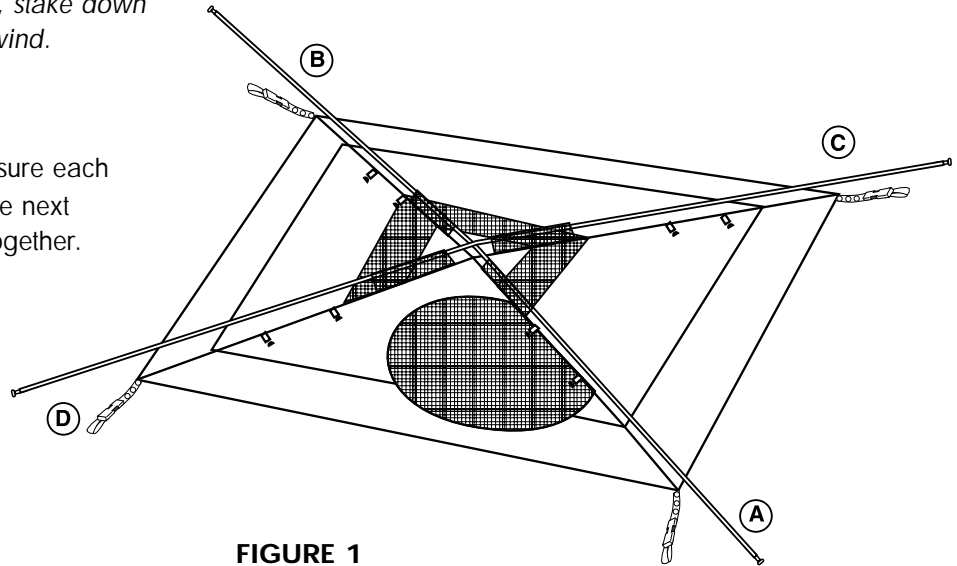


FIGURE 1

3 Start at one corner thread one pole through the mesh rod sleeve to the opposite side. (See Figure 1)

4 Repeat with second tent pole.

5 Starting at location A, place the poles end tip (post) into the first grommet on the tents web foot. Then go to the opposite corner of the tent, location B. Grasp in one hand, the tents web foot, in the other hand push the pole towards location A. Place the poles post into one of the grommets on the tent web foot. This will form a continuous arch from corner to corner. Repeat this step with the second pole location C to D. (See Figure 2)

6 Attach all clips to tent poles. Your tent is now free standing and can now be staked out in the desired location.
NOTE: Some models have more or fewer clips than shown.

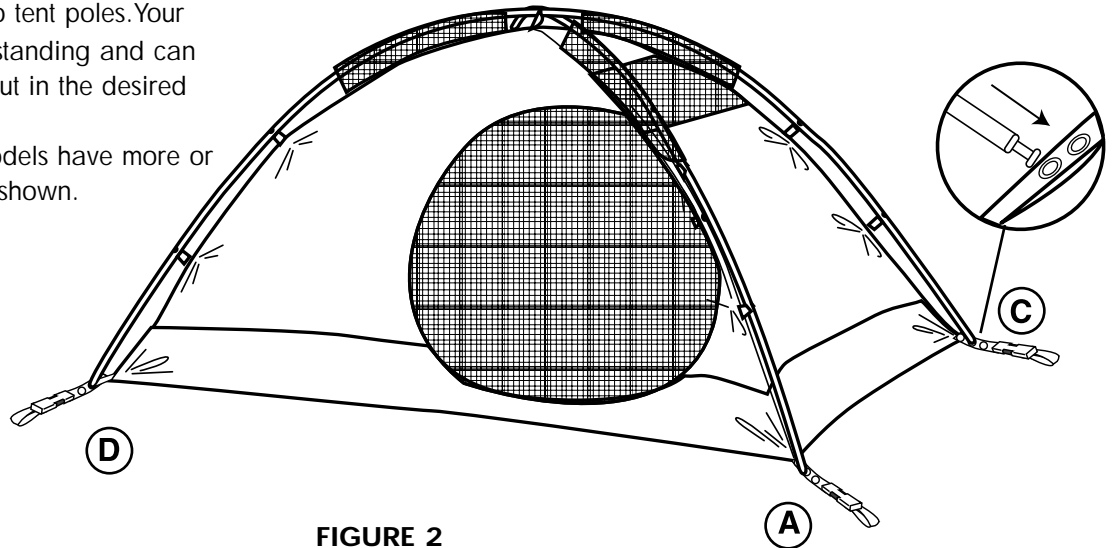


FIGURE 2

7 Spread the fly out and place the fly rod into the rod pockets at the front and rear. Then wrap the velcro at the center around the fly rod. Drape the fly over the tent.


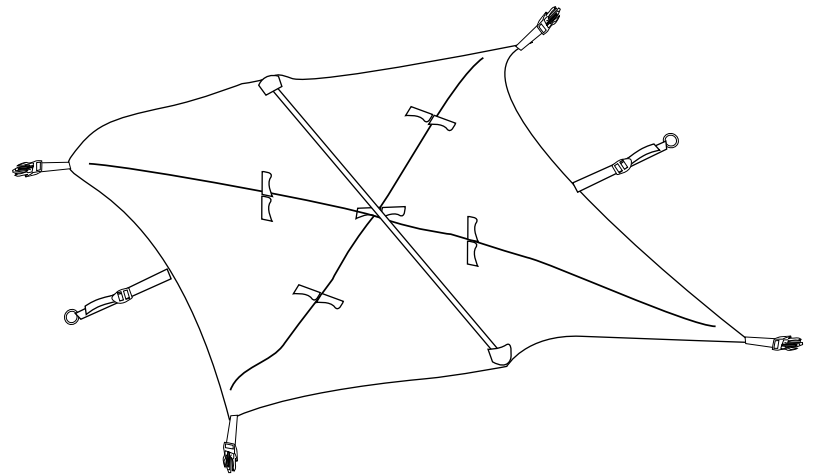


FIGURE 3

8 Wrap hook & loop fasteners around tent poles. (Located on underside of fly)

9 Fasten buckles at corners of fly to their mates at the corners of the tent.

10 Now use the corner web & buckles and side pullout web on fly to adjust tension.

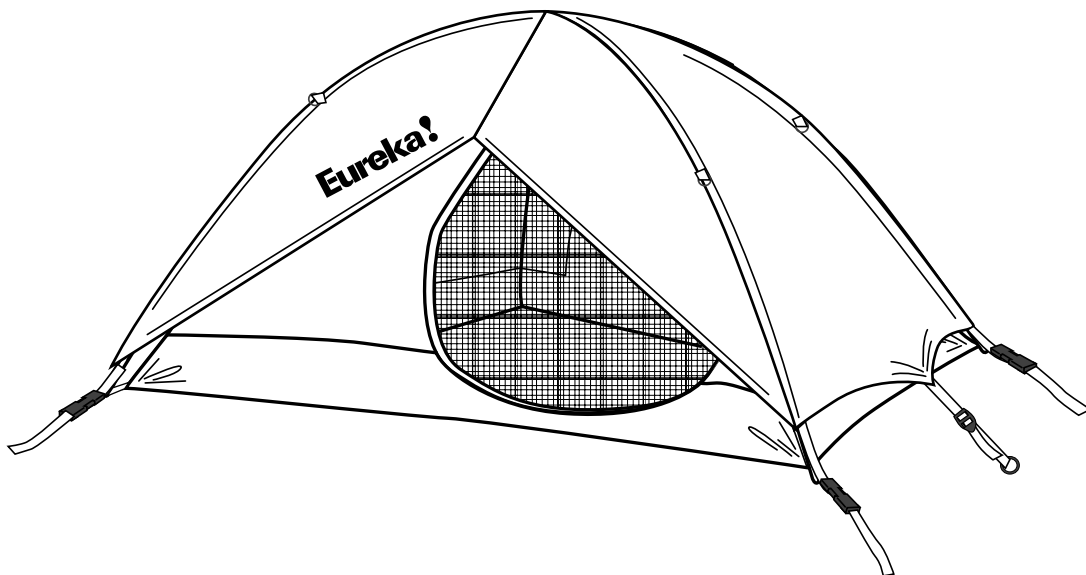

TO PREVENT CONDENSATION

The High/Low Climate Control allows the door window to be opened from the top in bad weather and from the bottom in good weather.

IN STRONG WINDS:

Tie extra ropes (not provided) to the storm loops on fly. Stake ropes down securely.

TAKE DOWN TIP:

Remove the fly and open door. Remove clips from poles. Pull pole tips from web & grommets.

OPTIONS:

Gear Loft attaches to loops inside the tent, great for small items.

Floor Saver provides protection underneath tent floor.