

Eureka! Assembly Instructions for the Mountain Breeze

FOR LIFE OUTDOORS.

Component List: 1 Tent Body, 1 Tent Fly, 1 Frame Assembly, 4 Guy Ropes w/ Sliders, 1 Carry Bag, 1 Stake Bag with Stakes, 1 Pole Bag

NOTE: Do not drop tent bag or pole bag on its end. Do not bounce tent bag on its end to get the tent out. These actions may cut the shock cord and/or damage the pole ends.

1. **Unroll and unfold the tent** and lay it on the ground. In windy conditions, stake down one front corner into wind. See fig.1.



fig.1

2. **Build the frame:** Fit each pole to its mate or hub. The sections are shockcorded. Try to keep the poles from snapping together, as this can damage the ends. Make sure that each section has firmly seated into its adjacent section or hub. Set the frame over the tent so that the pole posts align to the corners and the hubs point down. See fig.2.

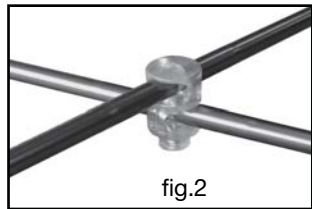


fig.2

3. **Attach the poles to the grommets:** There is a web and grommet sewn to each corner of the tent. Insert the locking posts from the base of the frame into the grommets. See fig. 3&4.



fig.3

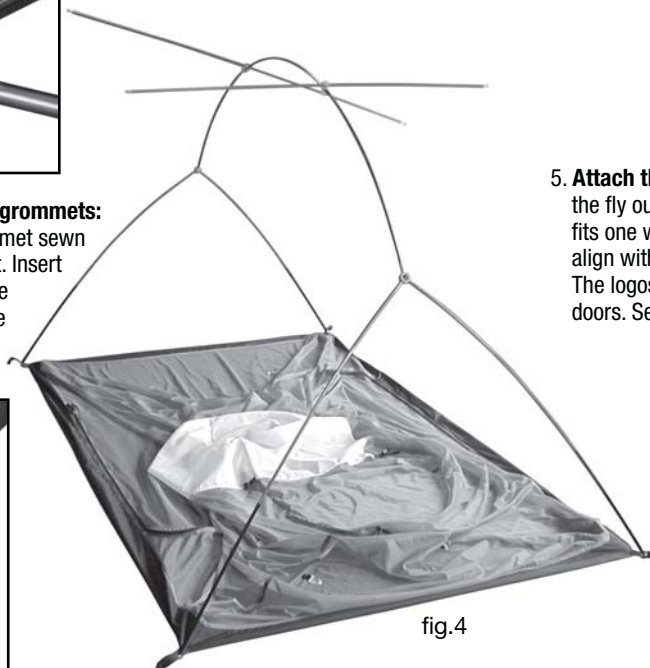


fig.4

4. **Attach the tent body to the frame:** There are three different types of connectors. Start at the bottom and work your way up the frame. See fig. 5, 6,7 and 8.

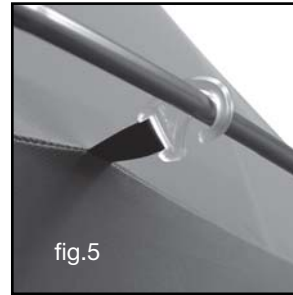


fig.5

a. First, hang the four pole clips. They just twist on/off.



fig.6

b. Second, slip the four web fittings over the hub pins on the bottom of each hub.

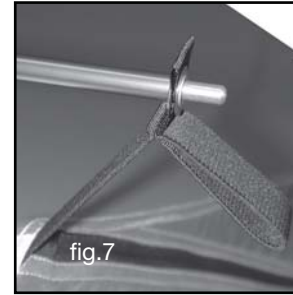


fig.7

c. Finally, fit it the two roof poles into the web grommets above each door.

d. The tent is now freestanding. Move it to your desired location.



fig.8

5. **Attach the fly to the tent:** Spread the fly out on top of the tent. It only fits one way. The doors of the fly align with the doors of the tent. The logos must go over the doors. See fig.9,10 & 11.



fig. 9



fig.10

a. Reach under the fly above each door. Capture the ends of the roof poles with the sewn-in pockets on the fly. See fig.10.



fig.11

b. Attach the web grommet of the fly to the bottom of the tent pole under the tent web at each corner. See fig. 11.

6. **Stake the tent down:** Stake it down through the corner web loops or through the cords, whichever works best. Stake opposite corners while applying tension to smooth the floor wrinkles and square the tent. Pull the web buckle to adjust tension. See fig.12.



fig.12

7. **Stake out the vestibules:** There are cords tied to grommets on both sides of the vestibule doors. Pull them out away from the tent and stake the cords down. See fig.13.



fig.13

Your tent is ready!

Important: In strong winds, guy out the cords from the storm loops on the fly and stake securely.

Take-down sequence:

- Pull out stakes.
- Remove fly, close vents and fold into a long rectangle.
- Pull the poles from grommets, collapse the frame and stow.
- Fold the tent into a long rectangle and lay the fly on top.
- Roll all towards the door and stow all.