

Eureka!


Made To Meet The Challenge

ASSEMBLY INSTRUCTIONS THE ZEUS EXO TENT:


Component List:

- 1 Tent Body
- 1 Tent Bag
- 2 Leg Sections w/Bag
- 1 Set Stakes w/Bag


- Unpack the tent bag. Unfold the tent and lay it out with the floor on the ground and a grommeted web in each corner. Do not stake down the tent just yet; but in windy conditions, stake down one corner that faces into the wind.
- Assemble all the shock-corded poles. Carefully seat each section. Try to keep the poles from snapping together as this can damage the fabric.
- Arrange the pole sections across the fabric from A → B and from C → D to form an X. See fig. 1.

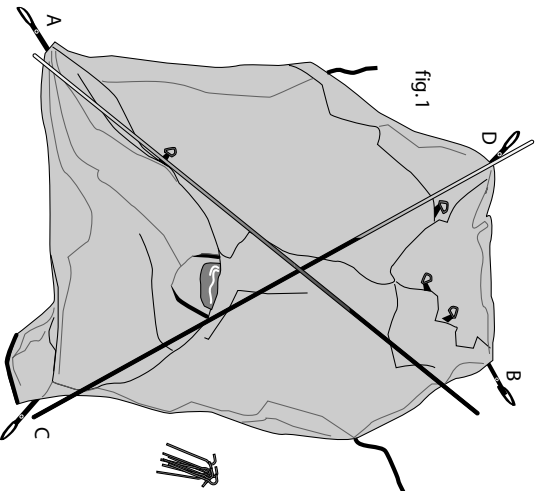


- Insert the first pole section into the grommet on the corner stake-out web at A. See fig. 2. At the opposite corner, B, grasp the web and simultaneously push the pole to form and arc. Insert the locking end tip into the grommet at B. Repeat with the second pole section at C → D. See fig. 3.

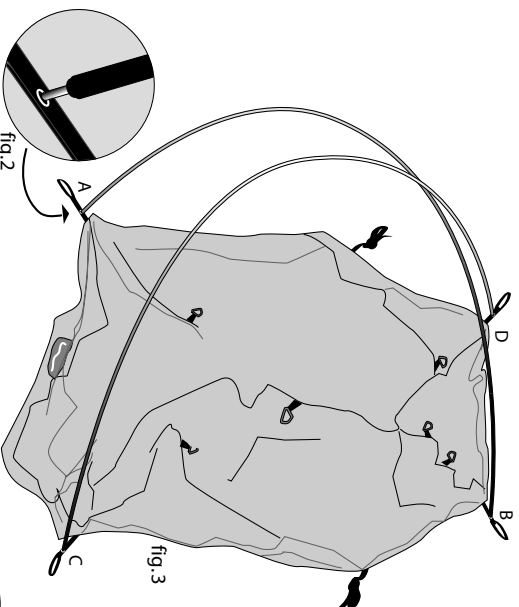

- Grasp the apex of both poles and raise them over the center of the fabric. See fig. 4. Attach the middle carabiner to capture both poles. See fig. 5.

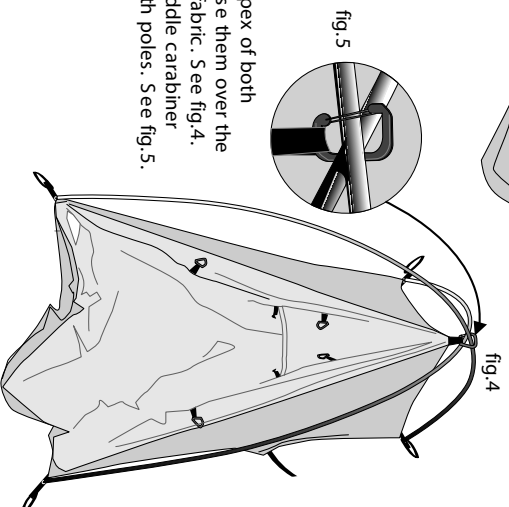

- Attach all the carabiners / clips to the poles and stake out each corner web. See fig. 6.
- Stake out the two vestibule webs and the side panel pull outs. Adjust tension. See fig. 7.

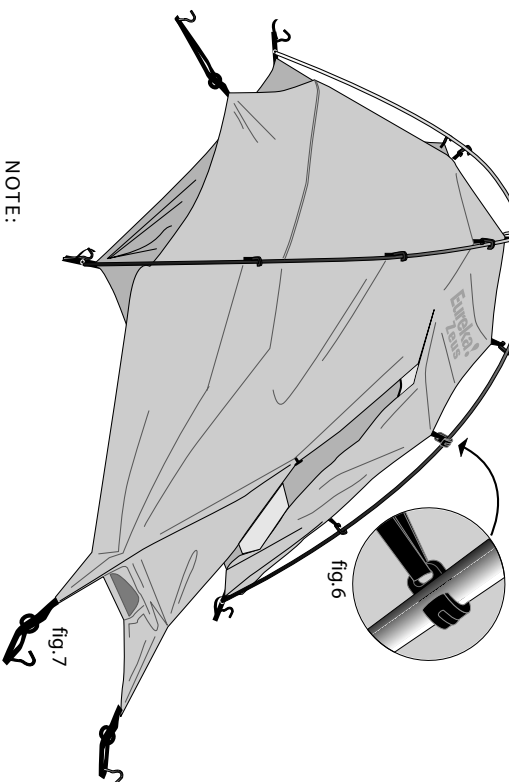

NOTE:

- To tear down, un-hook the carabiners / clips and collapse the poles. Arrange the tent into a rectangle and fold the vestibule inward.
- To increase airflow into the tent body, roll down the low vent on the door flap and secure with Velcro® fasteners.
- During high winds, tie a guy-out cord to each pole and its center carabiner. Stake out the cords, at 3-4 feet from the tent, in line with the direction the pole.

www.eurekatent.com
1.800.572.8822

LEAVE NO TRACE

1. PLAN AHEAD AND PREPARE
2. TRAVEL & CAMP ON DURABLE SURFACES
3. DISPOSE OF WASTE PROPERLY
4. LEAVE WHAT YOU FIND
5. MINIMIZE CAMPFIRE IMPACTS
6. RESPECT WILDLIFE
7. BE COURTEOUS OF OTHER VISITORS

